

**INSTALLATION INSTRUCTIONS FOR
DYNOMAX KIT: 39479**

1997-90 Mazda Miata MX-5 1.6L, 1.8L



2701 N. Dettman Rd.
Jackson, MI 49201

DANGER WARNING: SHOULD THE PURCHASER DECIDE TO INSTALL ANY EXHAUST PRODUCT AT HOME, BE WARNED THAT PASSENGER CAR OR LIGHT DUTY TRUCK/VAN "BUMPER" JACKS ARE INTENDED FOR EMERGENCY USE ONLY. THE USE OF FRAME CONTACT JACK STANDS IN CONJUNCTION WITH A FLOOR JACK AS MAIN SUPPORT IS HIGHLY RECOMMENDED TO MINIMIZE ACCIDENTAL DROPPING OF A VEHICLE DURING THE INSTALLATION PROCESS.

NOTE: Read all instructions before starting any work.

1. Remove the O.E. inlet pipe, muffler and tail pipe from the vehicle. Lubricate the rubber isolators with WD-40, or similar product, to aid in removal of the metal rod hangers.
2. Install DynoMax inlet pipe **706484**. Used supplied gasket **31357** (503402). Insert the metal rod hanger into the rubber isolator on the chassis. Finger tighten the inlet clamp.
3. Install DynoMax Ultra Flo SS muffler **706485** using the 2" band clamp. Insert the metal rod hangers into the rubber isolators on the chassis.


4. Beginning at the inlet end, align the system and fully tighten all the clamps.
5. Please see the system diagram on the back page of these instructions.

KIT CONTAINS:

- (1) 706485 MUFFLER
- (1) 706484 INLET PIPE
- (1) 503402 (31537) GASKET
- (1) 2" CLAMP
- (1) 709194 INSTRUCTION SHEET


39479 SYSTEM DIAGRAM

503402
(Ref. 31537)

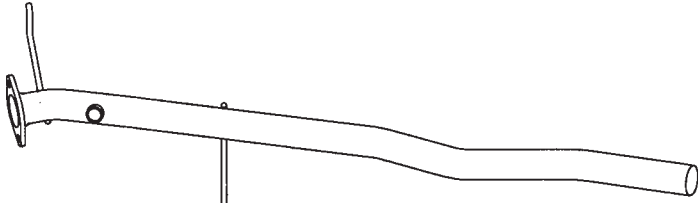

706484

2"
Clamp

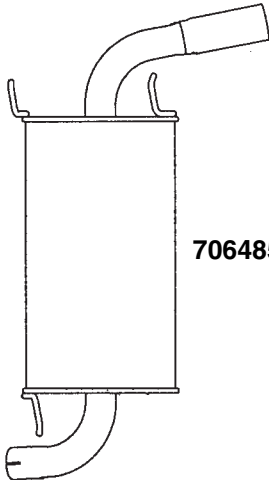

706485