

## INSTALLATION INSTRUCTIONS FOR

### DYNOMAX KIT: 39480

2016-09 Dodge Ram 1500 5.7L, Dual Exhaust



2701 N. Dettman Rd.  
Jackson, MI 49201

**PLEASE NOTE:** This DynoMax exhaust system fits only Dodge Ram 1500 trucks that originally came from the factory with dual exhaust and that already have clearance for the exhaust tips in the rear bumper.

**DANGER WARNING:** SHOULD THE PURCHASER DECIDE TO INSTALL ANY EXHAUST PRODUCT AT HOME, BE WARNED THAT PASSENGER CAR OR LIGHT DUTY TRUCK/VAN "BUMPER OR SCISSOR" JACKS ARE INTENDED FOR EMERGENCY USE ONLY. THE USE OF FRAME CONTACT JACK STANDS IN CONJUNCTION WITH A FLOOR JACK AS MAIN SUPPORT IS HIGHLY RECOMMENDED TO MINIMIZE ACCIDENTAL DROPPING OF A VEHICLE DURING THE INSTALLATION PROCESS.

**NOTE:** Read all instructions before starting any work.



1. Remove the O.E. muffler and tail pipes only Any pipe ahead of the OE muffler should be retained. Lubricate the rubber isolators and fasteners with WD-40, or a similar product, to aid in removal.
2. Place a 3" band clamp on the inlet of DynoMax front pipe **51061** and install. Slightly tighten the inlet band clamp.
3. Install DynoMax Ultra Flo SS muffler **17273**. Place a 3" saddle clamp on the muffler inlet connection and finger tighten. Rotate the muffler to a 450 angle with the top toward the drive shaft. See the system diagram.
4. Install DynoMax passenger side (RH) dual tail pipe **55490**. Insert the rod hangers into the OE rubber insulators. Finger tighten a 2½" saddle clamp on the tail pipe to muffler outlet connection.

5. Install DynoMax driver's side (LH) dual front tail pipe **53660**. Insert the rod hanger into the OE rubber insulator on the vehicle cross-member. Finger tighten a 2½" saddle clamp on the tail pipe to muffler outlet.
6. Place a 2½" band clamp on the inlet end and install the LH dual rear tail pipe **53661** onto the outlet of 53660. Insert the rod hanger into OE rubber isolator. Slightly tighten the inlet end band clamp.
7. Place 2½" band clamps on the inlet end and install the DynoMax SS tip **36458**.
8. Beginning at the inlet end, align the exhaust system components and fully tighten all the clamps.
9. Please see the system diagram on the back page of these instructions.

#### KIT CONTAINS:

- (1) 17273 MUFFLER
- (1) 51061 FRONT. PIPE
- (1) 55490 TAIL PIPE
- (1) 53660 TAIL PIPE
- (1) 53661 TAIL PIPE
- (3) 36438 2½" band clamp
- (2) 36248 2½" saddle clamp
- (1) 36439 3" band clamp
- (1) 33272 3" saddle clamp
- (1) 709047 INSTRUCTION SHEET

# 39480 SYSTEM DIAGRAM

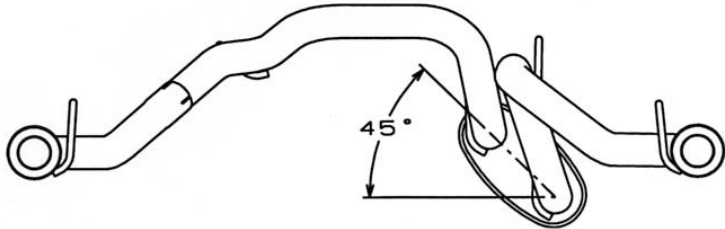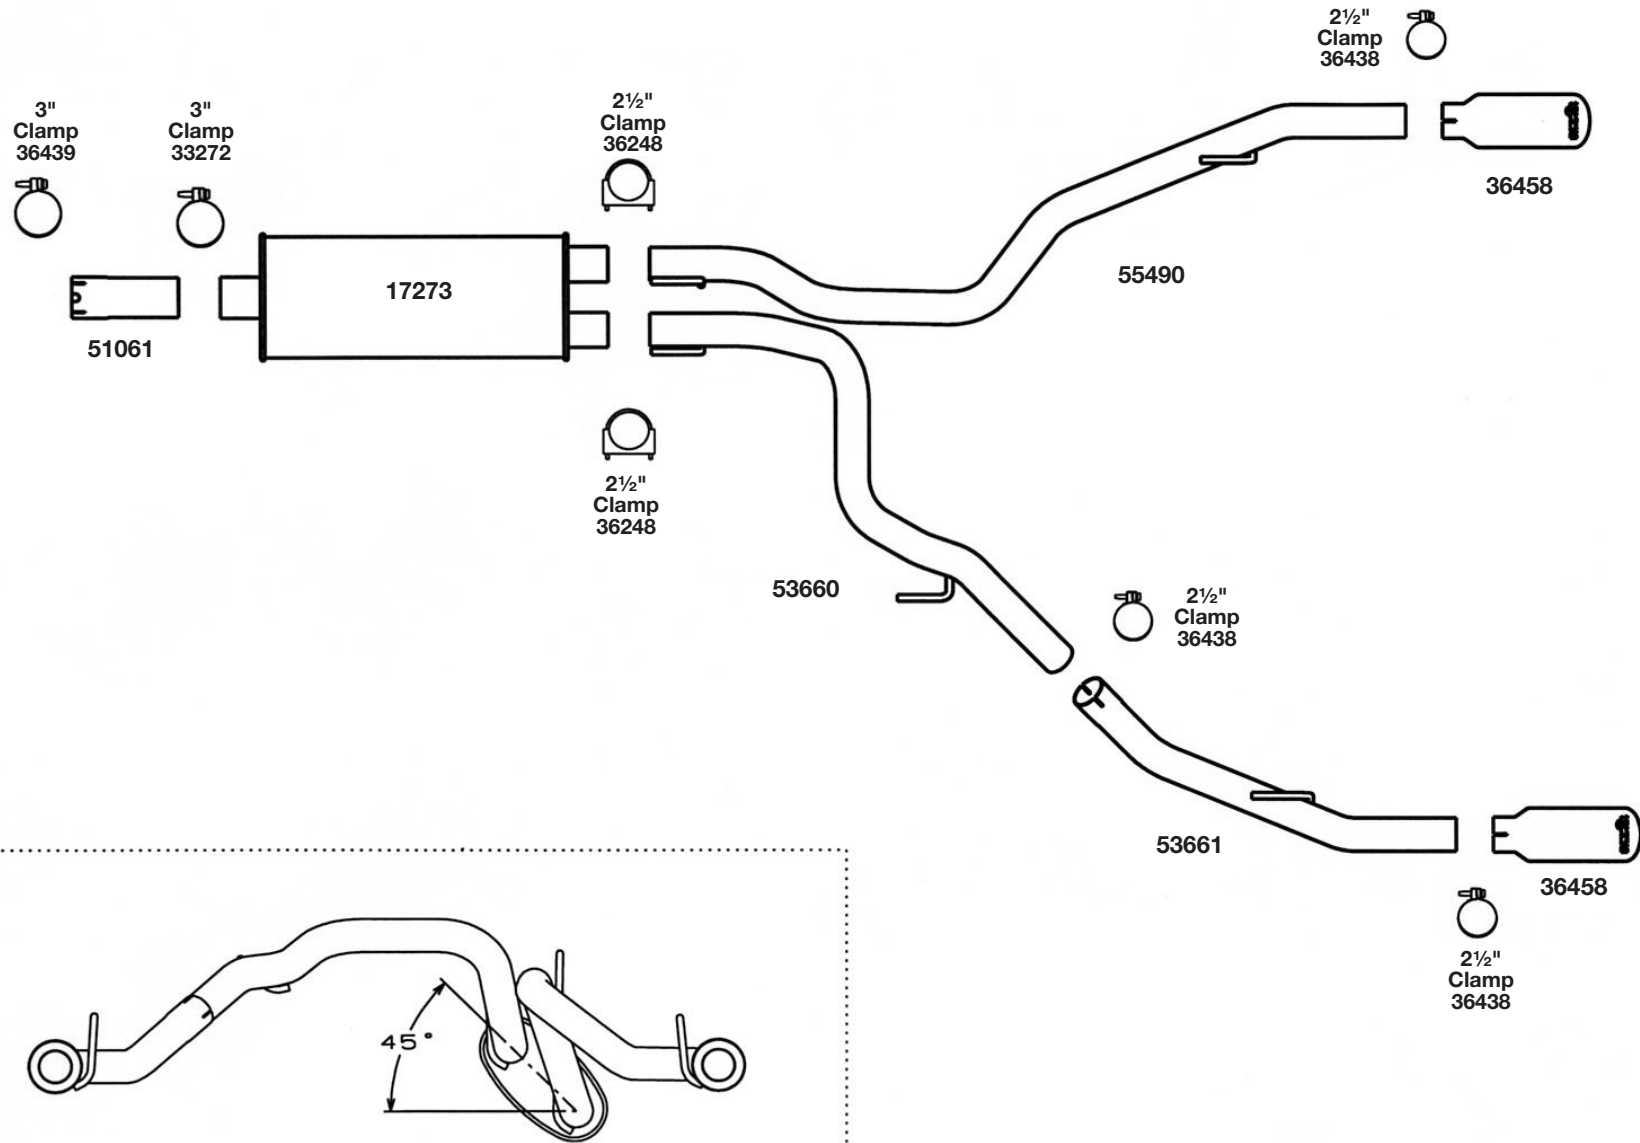

View From Rear